



## Ultrasonic sensor


UC4000-L2-E5-V15-Y70120089

- Sensor head bidirectional and rotatable
- Function indicators visible from all directions
- Quick mounting bracket
- Programmable
- Custom configuration

Single head system



### Dimensions

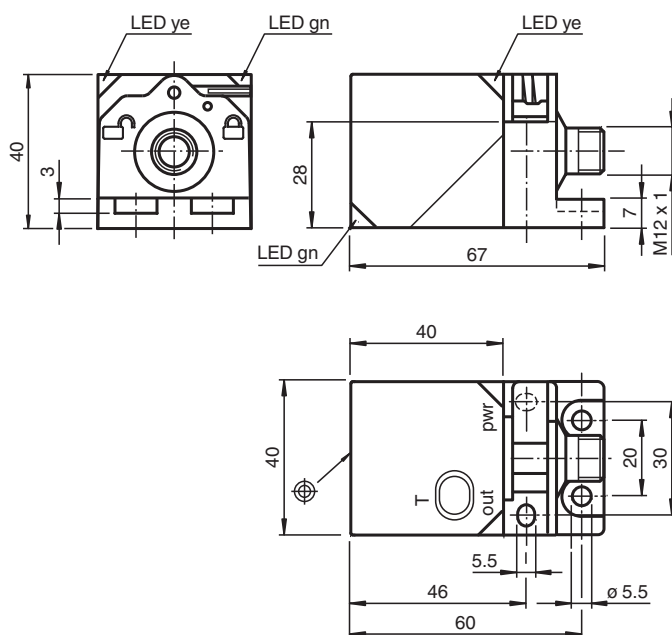

### Technical Data

#### General specifications

|                       |                 |
|-----------------------|-----------------|
| Sensing range         | 200 ... 4000 mm |
| Adjustment range      | 240 ... 4000 mm |
| Dead band             | 0 ... 200 mm    |
| Standard target plate | 100 mm x 100 mm |
| Transducer frequency  | approx. 85 kHz  |

#### Nominal ratings

|                                |                                            |
|--------------------------------|--------------------------------------------|
| Response delay                 | minimum: 110 ms<br>factory setting: 280 ms |
| Time delay before availability | $t_v$ ≤ 1600 ms                            |

#### Indicators/operating means

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group  
www.pepperl-fuchs.com

USA: +1 330 486 0001  
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111  
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091  
fa-info@sg.pepperl-fuchs.com

**PEPPERL+FUCHS**

## Technical Data


|                                                 |       |                                                                                                 |
|-------------------------------------------------|-------|-------------------------------------------------------------------------------------------------|
| LED green                                       |       | Operating display                                                                               |
| LED yellow                                      |       | switching state                                                                                 |
| LED red                                         |       | error                                                                                           |
| <b>Electrical specifications</b>                |       |                                                                                                 |
| Operating voltage                               | $U_B$ | 10 ... 30 V DC , ripple 10 % <sub>SS</sub>                                                      |
| No-load supply current                          | $I_0$ | ≤ 50 mA                                                                                         |
| <b>Interface</b>                                |       |                                                                                                 |
| Interface type                                  |       | Serial interface (programming adapter required)<br>9600 BPS, no parity, 8 data bits, 1 stop bit |
| <b>Input/Output</b>                             |       |                                                                                                 |
| Input/output type                               |       | 1 synchronization connection, bidirectional                                                     |
| 0 Level                                         |       | 0 ... 1 V                                                                                       |
| 1 Level                                         |       | 4 V ... $U_B$                                                                                   |
| Input impedance                                 |       | > 12 kΩ                                                                                         |
| Output rated operating current                  |       | < 12 mA                                                                                         |
| Pulse length                                    |       | 0.5 ... 300 ms (level 1)                                                                        |
| Pulse interval                                  |       | ≥ 62.5 ms (level 0)                                                                             |
| Synchronization frequency                       |       |                                                                                                 |
| Common mode operation                           |       | ≤ 16 Hz                                                                                         |
| Multiplex operation                             |       | ≤ 17 Hz / n , n = number of sensors , n ≤ 10<br>(factory setting: n = 5 )                       |
| <b>Input</b>                                    |       |                                                                                                 |
| Input type                                      |       | 1 program input                                                                                 |
| Level (switch point 1)                          |       | 0 ... 1 V                                                                                       |
| Level (switch point 2)                          |       | 4 V ... $U_B$                                                                                   |
| Input impedance                                 |       | > 10 kΩ                                                                                         |
| Pulse length                                    |       | 2 ... 10 s                                                                                      |
| <b>Output</b>                                   |       |                                                                                                 |
| Output type                                     |       | 1 switching output E5, PNP NO/NC, programmable                                                  |
| Rated operating current                         | $I_e$ | 200 mA , short-circuit/overload protected                                                       |
| Voltage drop                                    | $U_d$ | ≤ 2 V                                                                                           |
| Repeat accuracy                                 |       | ≤ 0.1 % of full-scale value                                                                     |
| Switching frequency                             | f     | ≤ 2.8 Hz                                                                                        |
| Range hysteresis                                | H     | programmable , preset to 1 mm                                                                   |
| Temperature influence                           |       | < 1.5 % of full-scale value                                                                     |
| <b>Compliance with standards and directives</b> |       |                                                                                                 |
| Standard conformity                             |       |                                                                                                 |
| Standards                                       |       | EN 60947-5-2:2007+A1:2012<br>IEC 60947-5-2:2007 + A1:2012                                       |
| <b>Approvals and certificates</b>               |       |                                                                                                 |
| UL approval                                     |       | cULus Listed, General Purpose                                                                   |
| CCC approval                                    |       | CCC approval / marking not required for products rated ≤36 V                                    |
| <b>Ambient conditions</b>                       |       |                                                                                                 |
| Ambient temperature                             |       | -25 ... 70 °C (-13 ... 158 °F)                                                                  |
| Storage temperature                             |       | -40 ... 85 °C (-40 ... 185 °F)                                                                  |
| <b>Mechanical specifications</b>                |       |                                                                                                 |
| Connection type                                 |       | Connector plug M12 x 1 , 5-pin                                                                  |
| Degree of protection                            |       | IP67                                                                                            |
| Material                                        |       |                                                                                                 |
| Housing                                         |       | PA-GF35                                                                                         |
| Transducer                                      |       | epoxy resin/hollow glass sphere mixture; polyurethane foam                                      |
| Mass                                            |       | 120 g                                                                                           |
| <b>Factory settings</b>                         |       |                                                                                                 |

Release date: 2021-03-05 Date of issue: 2021-03-05 Filename: 70120089\_eng.pdf


Technical Data

|                           |                                                                                                                       |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Output                    | near switch point: 240 mm<br>far switch point: 4000 mm<br>output function: Window mode<br>output behavior: NO contact |
| Beam width                | narrow                                                                                                                |
| Evaluation procedure      | averaging (MxN)<br>M = 8<br>N = 0                                                                                     |
| General information       |                                                                                                                       |
| Supplementary information | Switch settings of the external programming adapter:<br>"output load": pull-down<br>"output logic": inv               |

Connection

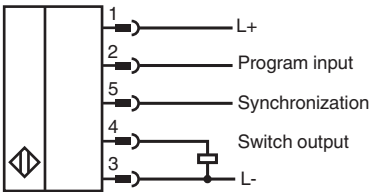

Connection Assignment

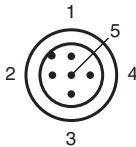


Wire colors in accordance with EN 60947-5-2

|   |    |         |
|---|----|---------|
| 1 | BN | (brown) |
| 2 | WH | (white) |
| 3 | BU | (blue)  |
| 4 | BK | (black) |
| 5 | GY | (gray)  |

Characteristic Curve

Characteristic response curve

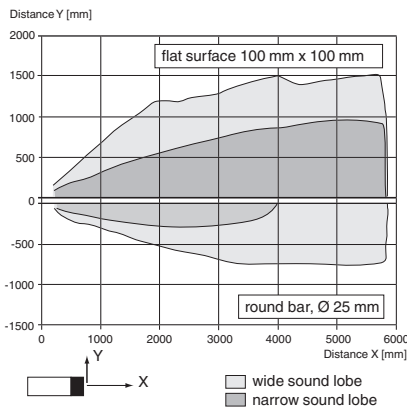

**Accessories**

|                                                                                   |                       |                                                                         |
|-----------------------------------------------------------------------------------|-----------------------|-------------------------------------------------------------------------|
|  | <b>UC-PROG1-USB</b>   | Programming adapter                                                     |
|  | <b>V15-G-2M-PVC</b>   | Female cordset single-ended M12 straight A-coded, 5-pin, PVC cable grey |
|  | <b>UB-PROG2</b>       | Programming unit                                                        |
|  | <b>Microsoft .NET</b> |                                                                         |

## Programming

### Programming procedure

The sensor features a single output with two programmable switch points. Programming the switch points and the operating mode can be done in three different ways:

- via the sensor's Programming Button
- by applying the supply voltage 0 V or  $+U_B$  to the Program input (only for programming the switch points)
- via the serial interface, which requires an external interface adapter

Procedures for programming via the sensor's Programming Button and the Program input are described below. For programming using the serial interface, please refer to the software manual. Switch points and operating modes can be programmed independently without influencing each other

#### Note:

- Programming is enabled for 5 minutes after power-on. After 5 minutes without programming activity the programming feature will be locked.
- During any programming step it is possible to leave the programming routine without changing the sensor settings by pressing the Programming Button for 10 s.

### Programming the Switch Points

#### Note:

If the red LED flashes during the programming procedure, it indicates uncertain target detection. In this case, please correct the target alignment until the yellow LED flashes. The new settings will only be stored in the sensor's memory if the yellow LED flashes.

### Programming Switch Points using the Internal Programming Button

#### Programming the Near Switch Point

1. Place the target at the desired near switch point position
2. Press the Programming Button for 2 s (yellow LED flashes)
3. Press the Programming Button briefly (green LED flashes three times for confirmation). The sensor returns to normal operation.

#### Programming of the Far Switch Point

1. Place the target at the desired far switch point position
2. Press the Programming Button for 2 s (yellow LED flashes)
3. Press the Programming Button for 2 s (green LED flashes three times for confirmation). The sensor returns to normal operation.

### Programming Switch Points by using the Program input wire

#### Notes:

- Before entering program mode the program input wire must be open circuit for at least 2s.
- If potential (0V or  $+U_B$ ) is applied for  $>10$  s the sensor resumes normal operation without changing settings. To ensure successful programming, disconnect the Program input before this 10 s time period elapses.
- If the program input is not used, the wire should be connected to 0 V.
- If programming adapter UB-PROG2 is used for the programming procedure, button A1 is assigned to 0 V and button A2 is assigned to  $+U_B$ . Please make sure, that the cordset's wire, which is connected to the Program input is not connected (open circuit).

#### Programming the Near Switch Point

1. Place the target at the desired near switch point position
2. Apply 0 V to the Program input for 2 s (yellow LED flashes, then green LED flashes three times for confirmation). Then sensor returns to normal operation.

#### Programming the Far Switch Point

1. Place the target at the desired far switch point position
2. Apply  $+U_B$  to the Program input for 2 s (yellow LED flashes, then green LED flashes three times for confirmation). Then sensor returns to normal operation.

### Programming Modes of Operation

The sensor provides a three step routine to program the modes of operation. In this routine you can program:

1. Output function
2. Output behavior
3. Beam width

Programming the modes is carried out sequentially. To toggle from one mode to the next, press the Programming Button for 2 s.

### Press the Programming Button for 5 s to enter the operating modes programming routine.

#### Programming the output function

1. The green LED flashes. The number of flashes indicates the current output function:  
single flash: Switch point output function  
double flash: Window output function  
triple flash: Hysteresis output function.
2. Press the Programming Button briefly to toggle sequentially through these output functions and select the desired mode.
3. Press the Programming Button for 2 s to save and enter the programming routine for output behavior

#### Programming the output behavior

1. The yellow LED flashes. The number of flashes indicates the current output behavior:

single flash: Normally Open (NO)  
double flash: Normally Closed (NC).

2. Press the Programming Button briefly to toggle sequentially through these output behaviors and select the desired mode.
3. Press the Programming Button for 2 s to save and enter the programming routine for beam width.

#### Programming the beam width

1. The red LED flashes. The number of flashes indicates the current beam width setting:  
single flash: narrow  
double flash: medium  
triple flash: wide.
2. Press the Programming Button briefly to toggle sequentially through these beam shapes.
3. Press the Programming Button for 2 s to save and exit the operating modes programming routine.

## Factory Setting

### Reset Sensor to Factory Settings

The sensor has a feature to reset to factory settings

1. Disconnect the sensor from power supply
2. Press and hold the Programming Button
3. Connect Sensor to power supply (yellow and red LED flash simultaneously for 5 s then yellow and green LED flash simultaneously)
4. Release Programming Button

The sensor now operates with default factory settings.

### Factory settings

See technical data.

## Indication

The sensor is provided with three LEDs to indicate various conditions.

|                                        | Green LED       | Yellow LED                                | Red LED         |
|----------------------------------------|-----------------|-------------------------------------------|-----------------|
| <b>During Normal operation</b>         |                 |                                           |                 |
| Proper operation                       | On              | Switching state remains in previous state | Off             |
| Interference (e.g. compressed air)     | Off             |                                           | On              |
| <b>During Switch Point Programming</b> |                 |                                           |                 |
| Object detected                        | Off             | Flashing                                  | Off             |
| No object detected                     | Off             | Off                                       | Flashing        |
| Confirmation after Programming         | Triple flashing | Off                                       | Off             |
| Programming failed warning             | Off             | Off                                       | Triple flashing |
| <b>During Sensor Mode Programming</b>  |                 |                                           |                 |
| Programming the output function        | Flashing        | Off                                       | Off             |
| Programming the output behaviour       | Off             | Flashing                                  | Off             |
| Programming the beam width             | Off             | Off                                       | Flashing        |

## Commissioning

### Synchronization

This sensor features a synchronization input for suppressing ultrasonic mutual interference ("cross talk"). If this input is not connected, the sensor will operate freewheeling using internally generated clock pulses. It can be synchronized by applying an external square wave or by means of appropriate programming via the serial interface. Each falling edge of the synchronization pulse triggers transmission of a single ultrasonic pulse. If the synchronization signal remains low for  $\geq 1$  second, the sensor will revert to normal operating mode. Normal operating mode can also be activated by opening the signal connection to the synchronization input. (See note below)  
If the synchronization input goes to a high level for  $> 1$  second, the sensor will switch to standby mode, indicated by the green LED. In this mode, the output(s) will remain in the last valid output state. When using the external synchronization feature, please refer to the software description.

#### Note:

If the option for synchronization is not used, the synchronization input has to be connected to ground (0V) or the sensor has to be operated via a V1 cordset (4-pin).

The synchronization function cannot be activated during programming mode and vice versa.

#### The following synchronization modes are possible:

1. Several sensors (max. number see technical data) can be synchronized together by interconnecting their respective synchronization inputs. In this case, each sensor alternately transmits ultrasonic pulses in a self multiplexing mode. No two sensors will transmit pulses at the same time. (See note below)
2. Several sensors (max. number see technical data) can be synchronized together by interconnecting their respective synchronization inputs. Due to programming via the sensors interface one sensor acts as a master device, all the others as slave devices. (see description of the interface) In this master / slave mode the sensors are triggered in parallel and are synchronized by a common synchronization pulse, provided by the master device.
3. Multiple sensors can be controlled by the same external synchronization signal. In this mode the sensors are triggered in parallel and are synchronized by a common external synchronization pulse. All sensors must be parameterized for external synchronization by means of the sensor interface. See software description.
4. A separate synchronization pulse can be sent to each individual sensor. In this mode the sensors operate in external multiplex mode. (See

note below). All sensors must be parameterized for external synchronization by means of the sensor interface. See software description.

5. A high level (+U<sub>B</sub>) or a low level (-U<sub>B</sub>) on the synchronization input switches the sensor to standby mode if it is parameterized for external synchronization.

**Note:**

Sensor response times will increase proportionally to the number of sensors that are in the synchronization string. This is a result of the multiplexing of the ultrasonic transmit and receive signal and the resulting increase in the measurement cycle time.

**Note:**

The sensors synchronization input delivers an output current in case of low level and burdens with its input impedance in case of high level. Please pay attention that the synchronizing device needs to have that driver capability:

driver current against +U<sub>B</sub>  $\geq n \cdot \text{high-level/input impedance}$  (n = number of sensors to be synchronized)

driver current against 0V  $\geq n \cdot \text{output current}$  (n = number of sensors to be synchronized).